



# Honeywell V15P

## Quick Reference

### TO ARM SYSTEM

Green "READY" light must be on. If not, press  button to display faulted zones.

### STAY ARMING (when someone is home, motion off)

PRESS:  +

### AWAY ARMING (When no one is home, motion on)

PRESS:  +

### NIGHT TIME ARMING (No motions, no entry delay)

PRESS:  +

### DISARM SYSTEM

PRESS:     +

### BYPASS ZONE

PRESS:     +  +   (Wait 10 secs, Bypassed zone will appear in window)

### DOOR CHIME ON/OFF

PRESS:     +  ("CHIME" will appear in window)

### PROGRAMMING ADDITIONAL CODES

(User No.)  
 (03-33) (Long tone = code accepted)  
 PRESS:     +  +   +    .

### DELETING CODES

(User No.)  
 (03 - 33) (Long tone= code deleted)  
 PRESS:     +  +   + # + 0

### CHANGING MASTER CODE

(old master code) (new master) (new master)  
 PRESS:     +  +   +     +     .  
 (Long tone= code accepted)